




Fill Line / Suction Line Assemblies


These assemblies make it possible to fill the tank from a convenient position outside the tank. They do not include through-wall fittings. The fill line consists of an exterior drop tube, 90° elbow, ball valve, male quick disconnect coupling, dust cap and exterior pipe support bracket. The interior assembly consists of drop tube and pipe support bracket. Gasket and bolts must be ordered separately.

Optional union may be ordered with exterior fill line. Optional foot valve may be ordered with internal suction line.

Fill Line Assemblies Available Sizes (inches)			
Size	1	2	3

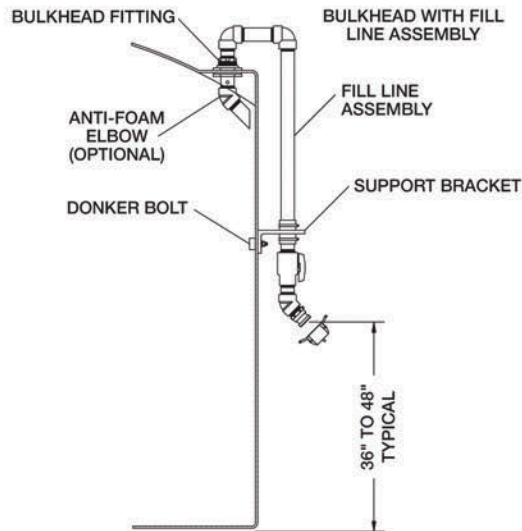

Fill Line / Anti-Foam Elbows

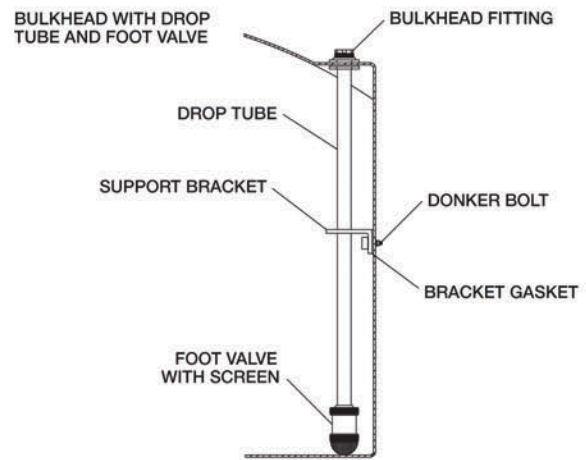

Top Suction

Anti-Foam Elbow

This assembly with 45° elbow and nipple extends to within 3" of the tank wall, directs liquid to run smoothly down the interior surface of the tank. This will reduce the generation of foam on the surface of the contents. Through-wall fitting is not included and must be ordered separately.

Anti-Foam Elbow Available Sizes (inches)				
Size	1	2	3	4

